



MAINTENANCE PARTS LIST FOR VIM INCINERATOR

In order to keep the combustion equipment in the best condition, we recommend the following parts for periodic replacement.

List of Periodic Replacement Parts			
No	ITEM	STANDARD RENEWAL TERM	QUOTATION REQUIRED
1	W.O. ATOMIZER	Once a Year	
2	PILOT ATOMIZER		
3	IGNITION ELECTRODE		
4	SENSOR FOR FLAME EYE (PHOTO CELL)		
5	OIL SEAL FOR PUMP		
6	COUPLING RUBBER		
7	COIL FOR MAGNETIC VALVE	Once every 3 years	
8	COUPLING FOR PUMP / MOTOR		
9	PRESSURE GAUGE		
10	THERMOCOUPLE		
11	THERMOMETER		
12	OIL STRAINER or STRAINER BASKET		
13	ARRESTER		
14	BEARING FOR MOTOR		
15	BEARING FOR I.D. FAN		
16	V BELT		

Please turn over.

List of Periodic Replacement Parts			
No	ITEM	STANDARD RENEWAL TERM	QUOTATION REQUIRED
17	SPRAYER	Once every 5 years	
18	W.O. PUMP		
19	PILOT BURNER PUMP		
20	RELIEF VALVE		
21	AIR REDUCING VALVE		
22	THERMO SWITCH		
23	PRESSURE SWITCH		
24	AIR CYLINDER		
25	FLAME EYE		
26	FLAME DETECTOR RELAY		
27	MAGNETIC VALVE		
28	SOLENOID FOR ASH OUTLET PORT		
29	IGNITION TRANSFORMER		
30	IGNITION CABLE		
31	CONTROL PANEL TRANSFORMER		
32	SWITCHING POWER SUPPLY		
33	MAGNETIC SWITCH with THERMAL RELAY		
34	AUXILIARY RELAY		
35	OTHER ELECTRIC PARTS		
36	V PULLEY FOR I.D. FAN / MOTOR		
37	SEQUENCER (PLC)	Once every 7 ~ 8 years	
38	MOTOR		

*Earlier replacement may be needed depending on the operating condition.

*Parts other than those listed above also need to be replaced depending on the condition.

Please contact Japanese trading company to obtain a quotation for spare parts along with this check list.

In case you do not have business with Japanese trading company, please email us to

"info-m@volcano.co.jp".

We will send you contact details of the trading company by return.