



## MAINTENANCE PARTS LIST FOR MJ BURNER

In order to keep the combustion equipment in the best condition, we recommend the following parts for periodic replacement.

<b>List of Periodic Replacement Parts</b>			
<b>No</b>	<b>ITEM</b>	<b>STANDARD RENEWAL TERM</b>	<b>QUOTATION REQUIRED</b>
1	F.O. ATOMIZER	Once a Year	
2	CAP NUT		
3	PILOT ATOMIZER		
4	IGNITION ELECTRODE		
5	SWIRLER		
6	SENSOR FOR FLAME EYE (PHOTO CELL)		
7	OIL SEAL FOR PUMP		
8	COUPLING RUBBER		
10	IGNITION PLUG	Once every 3 years	
11	METAL THROAT		
12	BEARING FOR MOTOR		
13	COIL FOR MAGNETIC VALVE		
14	COUPLING FOR PUMP / MOTOR		
15	PRESSURE GAUGE		
16	COMPOUND GAUGE		
17	THERMOMETER		
18	OIL STRAINER		
19	SPRING FOR AIR DAMPER		

Please turn over.

<b>List of Periodic Replacement Parts</b>				
<b>No</b>	<b>ITEM</b>	<b>STANDARD RENEWAL TERM</b>	<b>QUOTATION REQUIRED</b>	
20	SPRAYER	Once every 5 years		
21	THROAT RING			
22	F.O. PUMP			
23	PILOT BURNER PUMP			
24	RELIEF VALVE			
25	FLAME EYE			
26	FLAME DETECTOR RELAY			
27	MAGNETIC VALVE			
28	DAMPER SOLENOID			
29	IGNITION TRANSFORMER			
30	IGNITION CABLE			
31	CONTROL PANEL TRANSFORMER			
32	SWITCHING POWER SUPPLY			
33	BATTERY FOR PLC			
34	MAGNETIC SWITCH with THERMAL RELAY			
35	AUXILIARY RELAY			
36	HEATER ELEMENT			
37	THERMOSTAT			
38	PRESSURE TRANSMITTER			
39	PRESSURE SWITCH			
40	SEQUENCER (PLC) or CAM TIMER		Once every 7 ~ 8 years	
41	MOTOR			

\*Earlier replacement may be needed depending on the operating condition.

\*Parts other than those listed above also need to be replaced depending on the condition.

Please contact Japanese trading company to obtain a quotation for spare parts along with this check list.

In case you do not have business with Japanese trading company, please email us to

"info-m@volcano.co.jp".

We will send you contact details of the trading company by return.